

Digital TV Remote Control Guide

TV, AUD, DVD, VCR, STB
Turn on/off a selected device.

Setup
Use for programming sequences of devices controlled by the remote.

Skip, Forward, Skip Back, REW, PLAY, FFWD, STOP, Pause, Record
In STB mode, these control the DVR functions. In other modes, these can control a VCR, DVD Player or DVR.

Menu
Displays the menu.

Guide
Opens the Interactive Program Guide.

Day +/-
Jump ahead or back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue
Access additional features on your set-top box.

Vol +/-
Raise or lower the volume.

Mute
Turn the sound off or on.

FAV
View your favorite channel.

Input
In TV control mode, will change the input of the device you are controlling.



Power
Turn on/off a selected device.

Live
Return to watching live TV.

List
Display a list of recorded, future and series rules on your DVR.

Info
Display the current channel and program information. Press again for more detail.

Browse, Search, Arrow and OK
Navigate and select onscreen choices.

Exit
Exit the current screen.

Page +/-
Page up or down in lists and Interactive Program guide.

Channel +/-
Changes to the next higher or lower channel.

Last
Recall the last channel or option.

Number Keys (0-9)
Directly select a channel or enter options.

To Power On or Off
On: Select TV and then hit power button to turn on TV. Press STB and then hit power for cable box (if red light is shown on cable box it is already turned on).

OFF: Select TV and press power.

What channel or input should my TV be on to use my set top box?

There are several options for inputs for your TV, depending upon how your installation was completed. Your TV may need to be set to a specific channel or to a specific input. Record that information here.

TV Location:	Needs to be set to:

To see what's on TV

There are several ways to find out what's showing.

Info Button: Press Info once for a brief description of the program you are viewing. Press Info again for more details.

OK Button: Press OK to show the "Zapper Bar." You'll see what's showing now.

Guide Button: This is the most comprehensive view of what's on. Go ahead and page through up to two weeks worth.

Favorites

Create Favorites Lists: There are eight pre-defined favorite lists named: Favorites 1, Favorite 2, etc.

1. Press Menu. Arrow down to My TV and then arrow right to Edit Favorites. Press OK.
2. To select your favorites list, move the right and left arrow button. Channels included in the Favorite List are marked with a check. Using the arrow buttons, move through the channels and press OK to add or remove a channel to your Favorite List.
3. When done, press the blue button to save your changes.

Using Favorites List:

1. Press FAV. By default, your list is ALL channels.
2. Arrow up/down to choose a Favorite List.
3. Use either the Channel Up/Down button or the Arrow buttons to move between channels in a list. Or, use the number keys to select a channel.
4. To leave Favorite mode, press FAV.

*Thank you
for choosing
Digital TV!*

VIDEO TUTORIAL

Turn to Channel 19 or visit www.albanytel.com (click on Digital TV, then select Guide/DVR Video Tutorial on left side) for easy-to-follow instructions.